

VANDAL RESISTANT BUBBLER KIT 97681C

1. Remove fountain or cooler panel to gain access to the bubbler fitting from underneath the basin.
2. Remove existing bubbler from the unit. Hold the bubbler fitting on the underside of the basin and unscrew bubbler from the top of the basin.
3. Remove and discard the sealing gaskets (black rubber washers) from above and below the basin. Reinsert the bubbler fitting into the basin.
4. Assemble the two lockwashers (Item 2) to the bubbler fitting. See figure B.
5. Apply thread sealer (not provided) to the bubbler fitting threads.
6. Assemble the bubbler to the bubbler fitting and tighten the bubbler fitting. The bubbler should be one quarter turn less than the desired position when the bubbler fitting is securely tightened from the underside of the basin.
7. For proper function of the lockwashers, the bubbler must be turned the last quarter turn from the upper side of the basin. This assembly method seats the lockwashers properly for correct operation.
8. Operate the unit and check for leaks.
9. Reassemble the fountain or cooler panel as required.

Figure A

OPERATION OF QUICK CONNECT FITTINGS

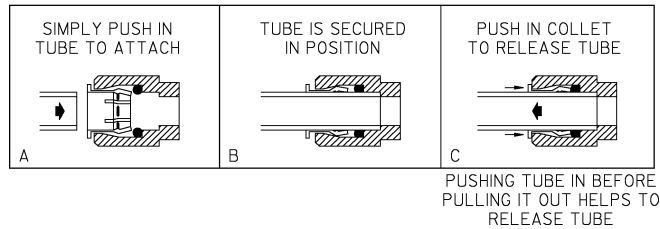


Figure B

PARTS LIST		
ITEMNO.	PARTNO.	DESCRIPTION
1	45392C	BODY-BUBBLER
2	75564C	LOCKWASHER

